

PINK
PINK-BLACK KAT. B SENSOR OPTIONAL

FUSE (MAX20A)

BATTERY




GND

DIAGNOSTIC SOCKET

OXYGEN SENSOR 1

OXYGEN SENSOR 2

FUEL TANK SOLENOID VALVE

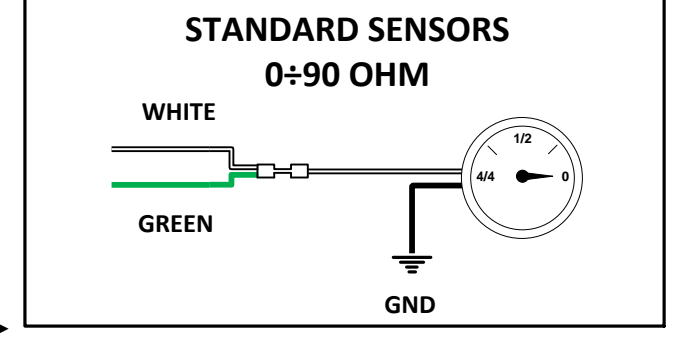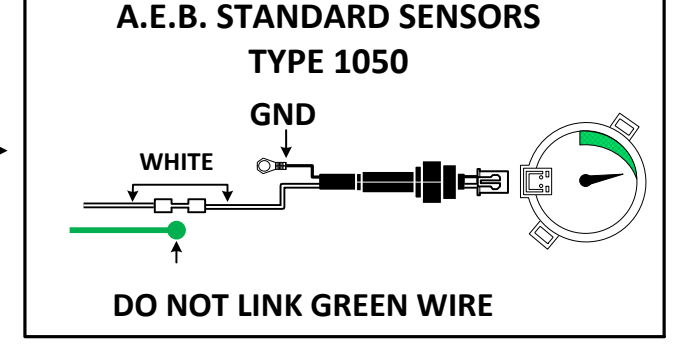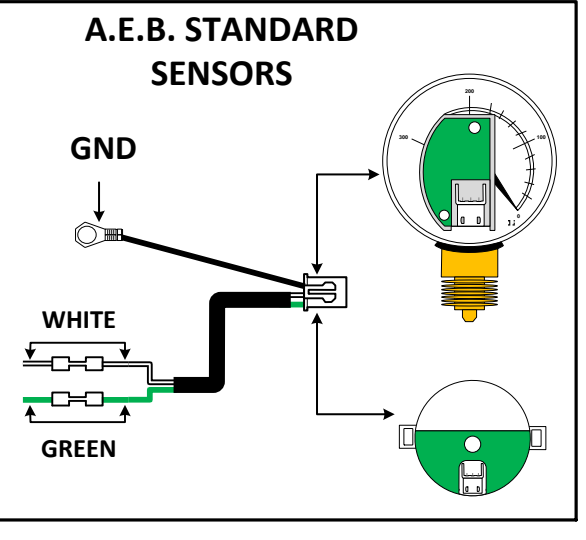

BANK B

BANK A

WARNING!

THE CONNECTOR OF THE GAS INJECTOR A MUST CORRESPOND TO THE BLUE WIRE OF THE PETROL CUT-INJECTOR CABLE. THE WIRES TO INTERRUPT ARE INJECTORS NEGATIVE WIRES.

WARNING!

THE CONNECTOR OF THE GAS INJECTOR A MUST CORRESPOND TO THE BLUE WIRE OF THE PETROL CUT-INJECTOR CABLE. THE WIRES TO INTERRUPT ARE INJECTORS NEGATIVE WIRES.

OBID CONNECTION (SEE PAGE DEDICATED)

GAS PRESSURE TEMPERATURE AND MAP SENSOR A.E.B.

RPM

PRESSURE REGULATOR SOLENOID VALVE

+12VOLT UNDER KEY

FUEL PRESSURE SENSOR

CHANGE OVER SWITCH